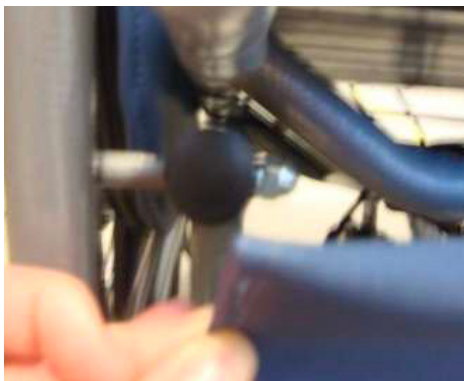

Parts Required:

- Base Apron Pad - Color & Width specific
-



Step 1:

Slide the flap, on the top (straight side) of the PR Apron over the black plastic plug, found underneath the pedal rocker. Cover both the left & right sides.



Step 1 (continued):



Step 2:

Wrap the strap & buckle around the crossbar & attach the plastic buckles. Tighten.



Step 2 (continued):



Step 3:

View of attached apron from the underside of the chair.

For more information:

Please contact Broda Customer Care at 1-800-668-0637